



*** Excellent Starter Instrument * Ideal Practice Keyboard
* Plays in Your Camper or Boat * Your Musical Travel Companion**

Our top artists like Franz Lambert and Curt Prina often complain about the lack of rehearsal time when they are on an extended concert tour. Do you miss your instrument while away from home? Did your child miss piano lessons because the grand had to be left at home while everyone was on vacation?

Now comes WERSI ENTERTAINER—the take anywhere mini-organ. Easily built from a kit, it is light enough to take anywhere, and can be powered from a variety of sources like a wall outlet or from 12 VDC (e.g. the cigarette lighter in your car). While in your home you may want to connect it to your stereo for the “big sound”. When you are on the go you can use the Entertainer with its built-in 10 Watt power amplifier and speaker. The take anywhere organ is ideal for every age group, for the home, camper, or boat.

The Entertainer has a full 4-octave keyboard with polyphonic voices like 16’ Horn, 8’ Tibia, and 8’ Clarinet. Frequency vibrato can be added to these voices with continuously adjustable speed and intensity. Six automatic rhythms, ranging from March to Swing, can be used in-

dividually or in any combination. A bass guitar can be coupled to the rhythm pattern, playing alternating bass, selecting the lowest and highest note of a held chord. Besides the three percussion instruments, a piano voice can also be added to the accompaniment pattern.

The Entertainer’s pitch can be tuned over a full note.

ARE YOU AFRAID OF BUILDING A FULL SIZE ORGAN? Convince yourself that you can by first building the ENTERTAINER, using our step-by-step assembly manual and clearly identified parts packages. The latest computer technology is employed in this instrument. The entire tone generation is located on a single integrated circuit. The complete electronics is packaged onto a mere three printed circuit boards.

Later on, when you move up to a full size organ, utilize the Entertainer as a traveling companion, children’s practice keyboard—or sell it to a friend!

Dimensions: 39” wide x 12.5” deep x 3” high. Weight: 26 lbs.

WERSI Fun Starter

Build a musical door announcer and you will see how easy it is to build a WERSI kit.

When you buy a WERSI Fun Starter you get a printed circuit board, a few electronic components and an assembly instruction booklet. Spend an hour or two of your own time and end up with a synthesized music box that plays up to 13 tunes when you touch a button or, if hooked up to your doorbell, when somebody rings at the door.

We are convinced that you will be convinced!

